

# PLEASE READ THIS MANUAL PRIOR TO INSTALLATION AND OPERATION

## Instructions For Installing Your Ionizer From Water Works 4 U



Plug in the ionizer into an available electrical outlet located near the sink where the ionizer is to be used. Place the ionizer on the countertop next to the sink. Choose any location for the ionizer that is most appropriate for your intended use within the household. The ionizer can be installed in the kitchen, bathroom, on a wet bar, in the laundry room, utility room, garage or **anywhere there is a sink**.

Unscrew the aerator from the water faucet. The aerator is the small housing at the tip of the faucet where the water comes out. Replace the aerator by screwing on the faucet diverter in its place. The diverter contains a lever on one side and a hose attachment on the other. The lever allows you to choose between normal tap water and water from the ionizer.

Connect one end of the inlet hose to the attachment nozzle on the diverter, and connect the other end to the bottom of the ionizer where it is marked "Inlet."

Attach the outlet tube to the bottom of the ionizer where it is marked "Outlet." Hang the other end of the outlet tube into the sink where the runoff can go down the drain.

Turn on the faucet and run water through the ionizer. The ionizer unit powers up automatically when it senses water running through it. Set the pH level on the ionizer using the buttons on the ionizer. Choose the "acidic" or "alkaline" setting as needed.

Consult the owner's manual included with the ionizer for specific information on the use of ionized water.

