

## Installation Video



<https://youtu.be/vTsxkdwtHhU>

## Filter Change Video




<https://youtu.be/O0JvKNC99X8>



WaterWorks4U

# ZEN

 
**Nonelectric Alkaline Water Purifier  
(Under The Counter Model)**

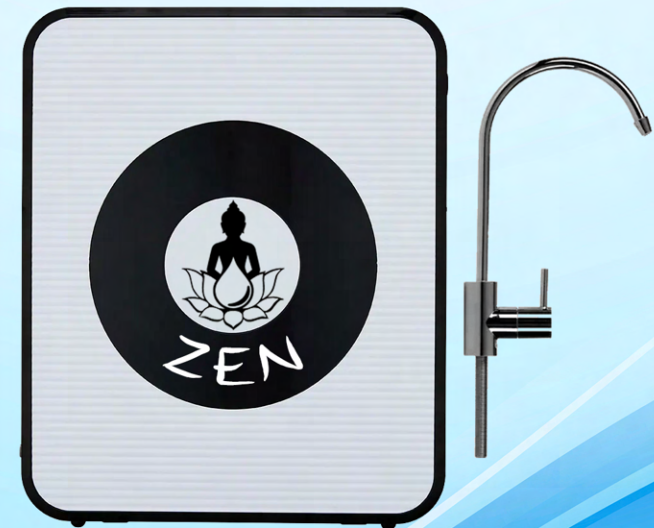

**USER MANUAL**

**WaterWorks4U**  
[www.waterworks4u.com](http://www.waterworks4u.com)

 
## ZEN Under The Counter Unit

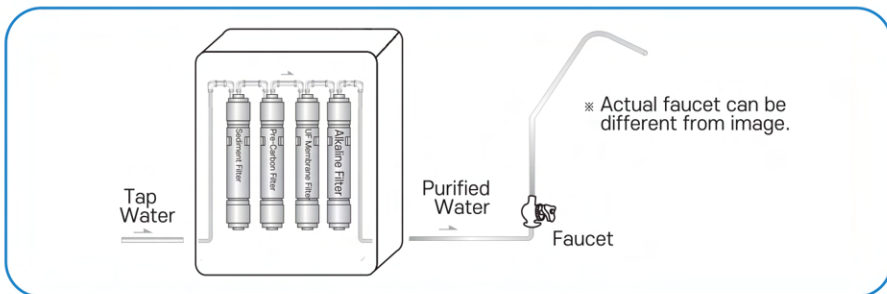

## Water Purifier System

### Warning

 Do not open cover when water is running. (May cause leakage)

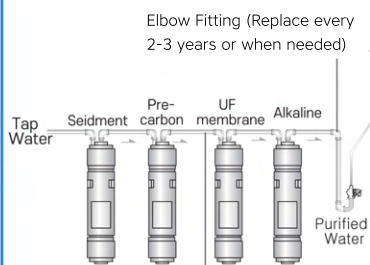

- **Filtration system**  
4 filters to provide healthy, purified alkaline water
- **Convenient water purifier**  
Simple and convenient water purifier for home use.
- **Directly connected to tap water**  
Purifying tap water with easy installation.
- **Perfect purifying system**  
Sediment filter - Remove pollutants  
Pre-carbon filter - Remove harmful residues  
UF membrane filter - Remove bacteria and impurities  
Alkaline filter - Increase pH


Fitting hose (Replace every 2-3 years or when needed)

## Installation Advice

 1. Avoid places and areas near direct sunlight, heat, or fire.
2. Make sure to turn off cold water valve when installing the Under the Counter model.
3. Make sure faucet is off when installing the Countertop model.
4. Use original filters and parts. (Contact WaterWorks4U for replacement parts)
5. After installation of unit, cycle water through filters for 10 minutes and inspect unit for leaks.  
(This needs to be done during initial installation of unit & after every filter change.)
6. If planning to not use for long periods of time, disconnect unit from water valve to prevent water leaks and property damage.
7. Do not drop or hit machine.
8. Do not place anything on water hoses. Make sure hoses are clear of sharp objects.
9. Do not place anything on top or in front of unit. (May cause damage)
10. Do not repair or disassemble product.
11. WaterWorks4U highly recommends hiring a plumber to install the Under the Counter unit.

## Filter Replacement

- 1 Turn off water at diverter and/or main water valve
- 2 Remove front cover and take out filter to be replaced.
- 3 Use fitting spinner or screwdriver to remove fittings from filter and replace filter. (Do one filter at a time)
- 4 Cycle water through new filters and check for leaks. Place cover back on when finished.

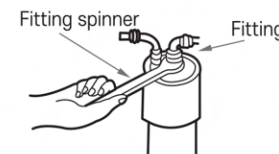


## Troubleshooting

※ Please refer to this checklist if you are experiencing an issue with the ZEN.

Problem	Possible cause	Solutions
Water taste is not good	Unused for a long time	Replace all filters and use.
	No water supply	Check faucet diverter and/or cold water line.
	Valve is fastened	Open cold water line and/or faucet diverter.
Water does not come out	Exhausted filters	Replace old filters.
	Water Leak	Loose connection
Open unit and check for leak. Make sure all hoses and fittings are properly fastened.		
 
## Specification

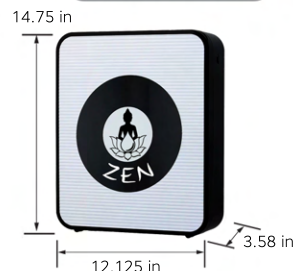

Model	ZEN-UTC	Condition	Water Pressure	Under 55 psi
Product	Alkaline water purifier	Filtration Material	Water Temperature	41°F ~ 104°F
			Sediment	PP
			Pre-carbon	Carbon
Number of Filters	4	Filtration Cycle	UF membrane	Ultrafiltration Membrane
			Alkaline	Alkaline Carbon Block
Purpose	Purifying Tap Water		Sediment	Every 6-8 months
Applicable Place	Home, Office, Hotel, RV	Filtration Cycle	Pre-carbon	Every 6-8 months
			UF membrane	Every 6-8 months
Weight	4.5 lbs		Alkaline	Every 6-8 months

- ※ If water pressure is over 55 psi, lower pressure under sink or install pressure reducing valve.
- ※ Recommended replacement cycle estimated upon a clean water environment and normal use.
- If water quality is not good or use very often, change filters more frequently. (Normal use: A 4 person family uses about 10 liters per day)